



Sequence No.	Part Name
1.	Blade
2.	Scrwe M5*5
3.	End Cover
4.	OIL SEAL
5.	Bushing-terminal
6.	O_AIRPROOF
7.	TUBE
8.	O_AIRPROOF
9.	BEAR688Z
10.	SHAFT HOLDER
11.	for shaft-type 8
12.	SHAFT
13.	Transmission Sleeve
14.	SCREW_ST4*10
15.	TUBE HOLDER
16.	DRIVING KEY
17.	BOLT M3-6
18.	CONNECTION
19.	RUBBER SEAT
20.	MOTOR_5425
1-1	Front hole plug
1-2	Back hole plug
1-3	SCREW_ST3*8
1-4	UP_COVER
1-5	BUTTON
1-6	Touch block
1-7	SWITCH
1-8	CORD HOLDER
1-9	BOTTOM COVER